## Putting an AirX into "Additional heater only" mode

11:17	We, 30.12.2020	auto	menu
201		man	info
Room tempera Optimise	ture	fav	5
	©	(	
	3416		

Press and hold the menu button for about 5 seconds until the menu appears:

Use the dial to scroll down to the menu called "Set additional heater". Press the dial in to enter this menu:





Press the dial to enter the menu "Gen. additional heater settings":

Use the dial to scroll down to the menu called "Additional heater only - No". Press the dial in to enter this menu:

	auto	ment
$\approx$ > Gen. additional heater settin		-
Select add. heat appliance None	man	info
Additional heater on delay 30K*min		
Mode after EVIL block ECO	fav	5
Additional heater only No		
Switch off add, neater No		
0		

Additional beater only	auto	men
O Yes	man	info
• No	fav	5
Select whether heating is		
U		

Use the dial to scroll up to "Yes" and press the dial in to confirm:

The screen will flash up with a box saying "Please wait. Data is being read or written". When this box disappears you will see that the menu now says "Additional heater only – Yes".

Now press the return arrow 3 times until you are back at the main screen. Note that it may take up to 15 minutes for the immersion to come on.

